


INSTALLATION INSTRUCTIONS

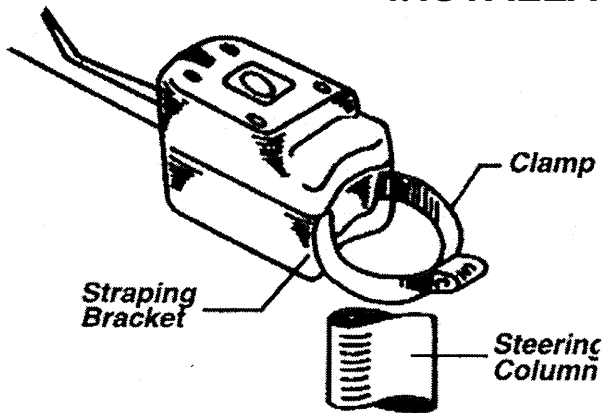

1. Insert the clamp into the narrow space between the switch housing and the strapping bracket.
2. Install the clamp around the steering column at the desired location. Scrape a small area of paint off the column to insure good grounding of the switch body.
3. Tighten the clamp to hold the switch firmly. Do not exceed 30 Inch Pounds of Torque.

WIRING DIAGRAM

